

# Navigation Chart

Model: 7E1, 7E2, 7E3

**TAPMAN®**

**To enter configuration:**  
Keep the **ESC** button pressed and then apply power.

**To save configuration:**  
Come to **ESC** and then press **ESC** to save the changes

